

Specifications

DESCRIPTION

- Brass construction
- Includes Red/Blue indicators

FLOW


- Showerhand is limited to 2.5gpm(9.5L/min) at 80psi
- Bathtub spout is minimum to 2.4gpm(9.0L/min) at 20psi

CARTRIDGE



- Brass cartridge

STANDARDS

- Certified to CUPC

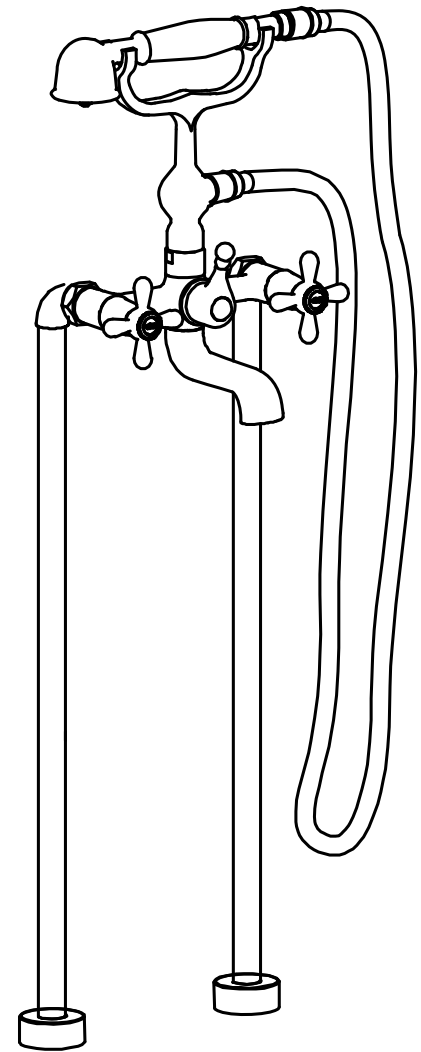


Bathtub Filler Standing Faucet

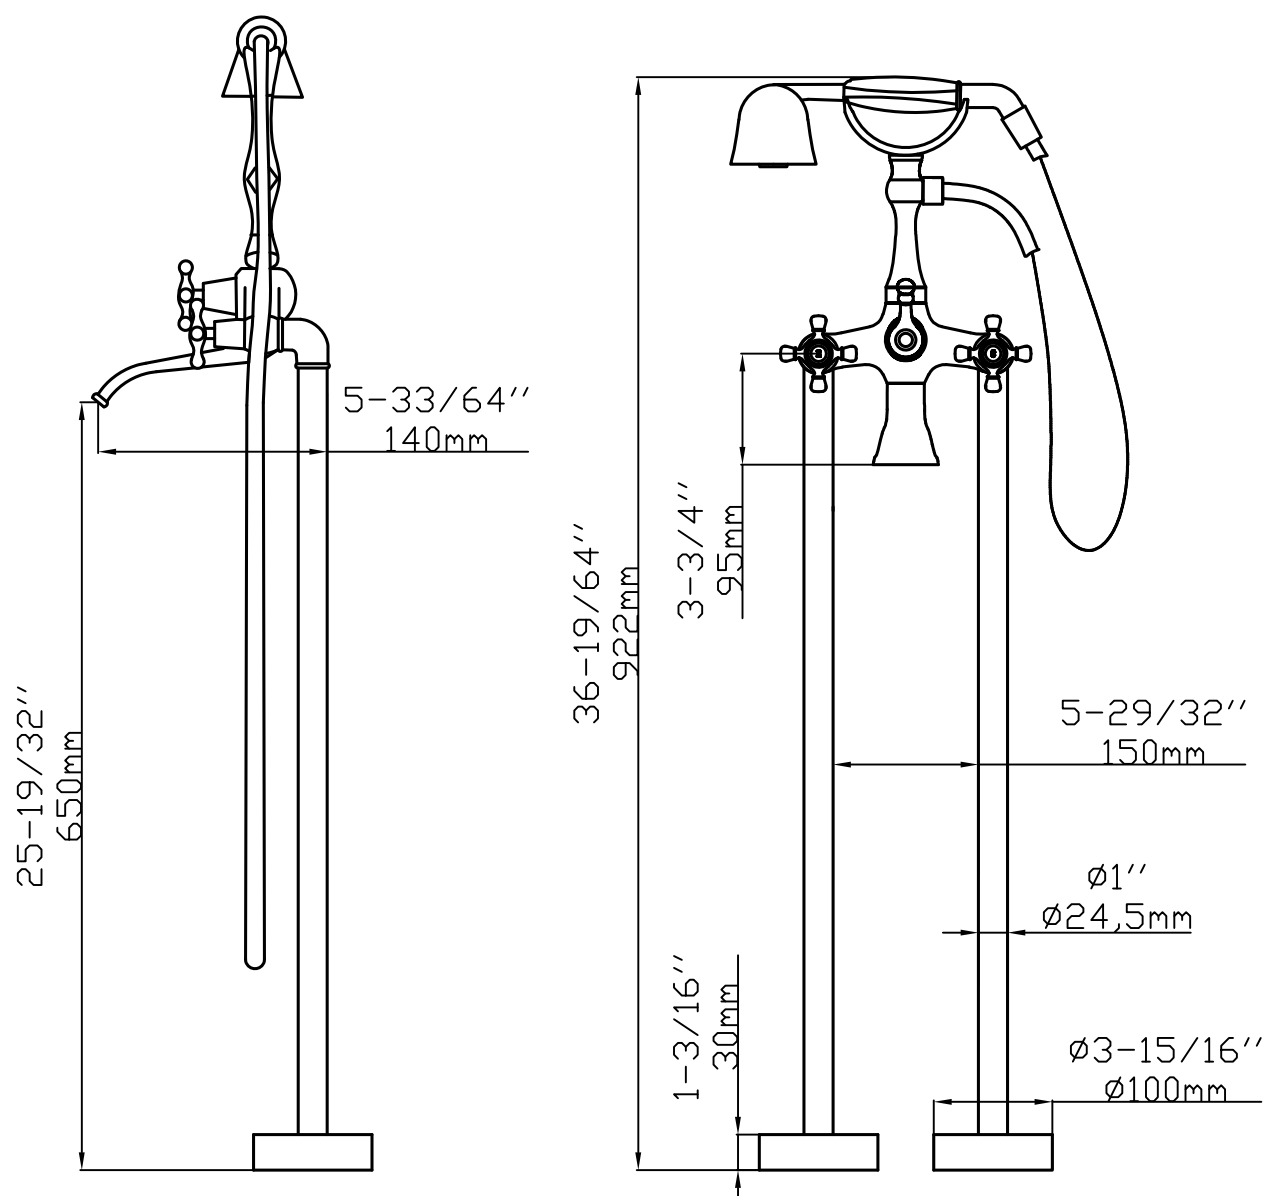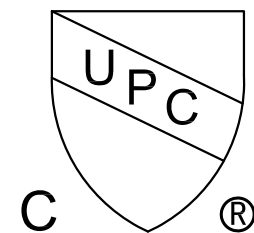


CRITICAL DIMENSIONS

Bathtub Filler Standing Faucet Installation

INSTALLATION MANUAL Tools You Will Need :

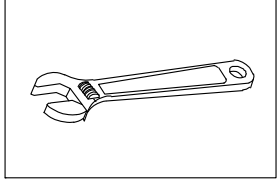

Adjustable wrench

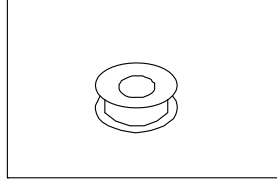


Pipe Tape

Notes before installation :


1. Please check that all components are present.
2. Before installation ensure that all feed lines are clear of debris and on/off valve is present.
3. Ensure water pressure is between 20-125 PSI (Includes combination of hot and cold feed lines).
4. Pictures in the manual are general in content and may not represent exactly your purchased faucet. If you are having difficulties please contact a professional plumber.
5. If you will be away from home for an extended period you should shut off the main water supply.

Daily maintenance


1. Use a soft cloth and vinegar to remove hard-water spots.
2. Check aerator (if present) regularly for calcium build up are when water stream is not optimum.
3. DO NOT use caustic cleaning products as the use will break down finish and will void the product warranty.
4. Acceptable cleaners include vinegar or mild non-abrasive liquid detergents.
5. If the water pressure appears to be less than optimum remove, inspect, clean or replace aerator.

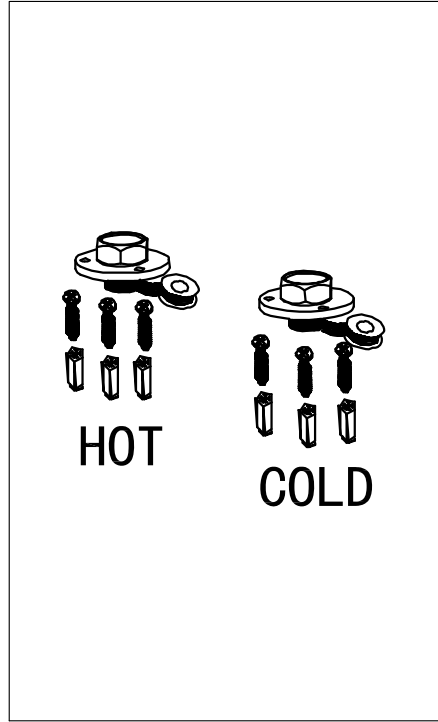


1. Insert the screw nut with screws connect the hot and cool supply hole in the ground.

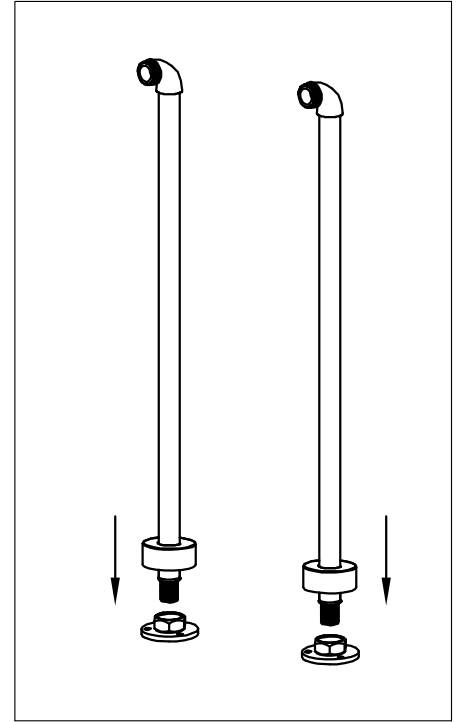

2. Insert sliding holder into water pipe, connect the water pipe screw nut and lock up tightenl.

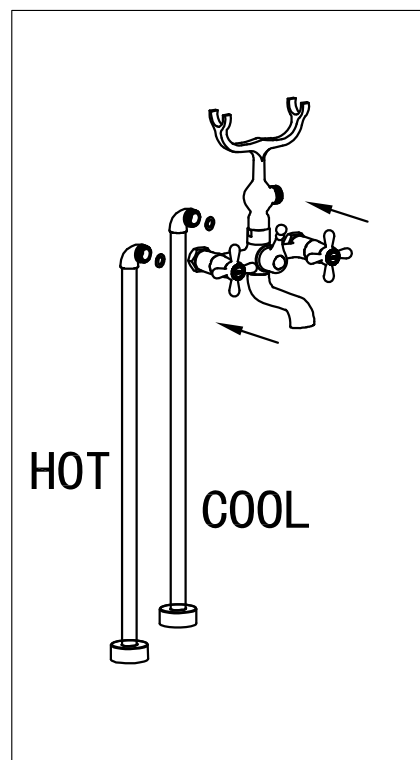

3. Insert the main body with water pipe, and lock up tighten.

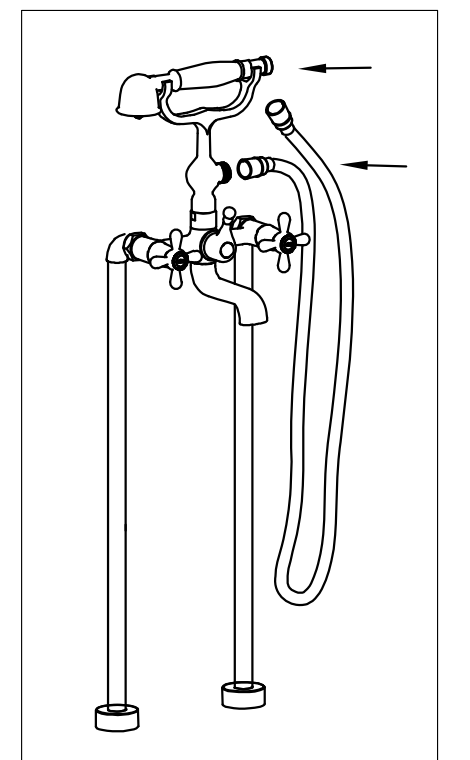

4. Connect one end of the hose with the main body, and connect the other end with the shower hand, fix on the supporting fork.